



Installation Instructions for Cold Protection Device


- (1) Wrap the Cold Protection Device unit around the lidar.

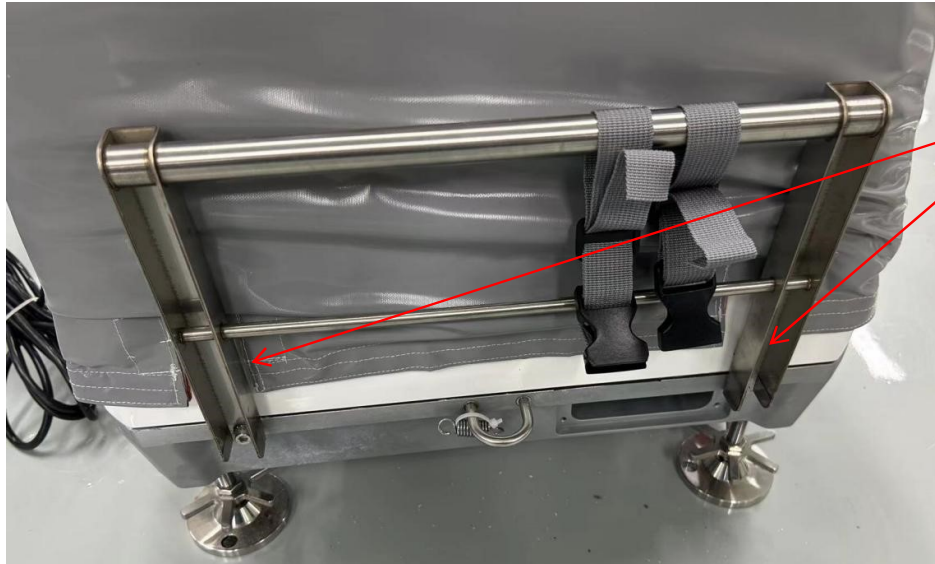


- (2) Velcro the insulation blanket tightly.

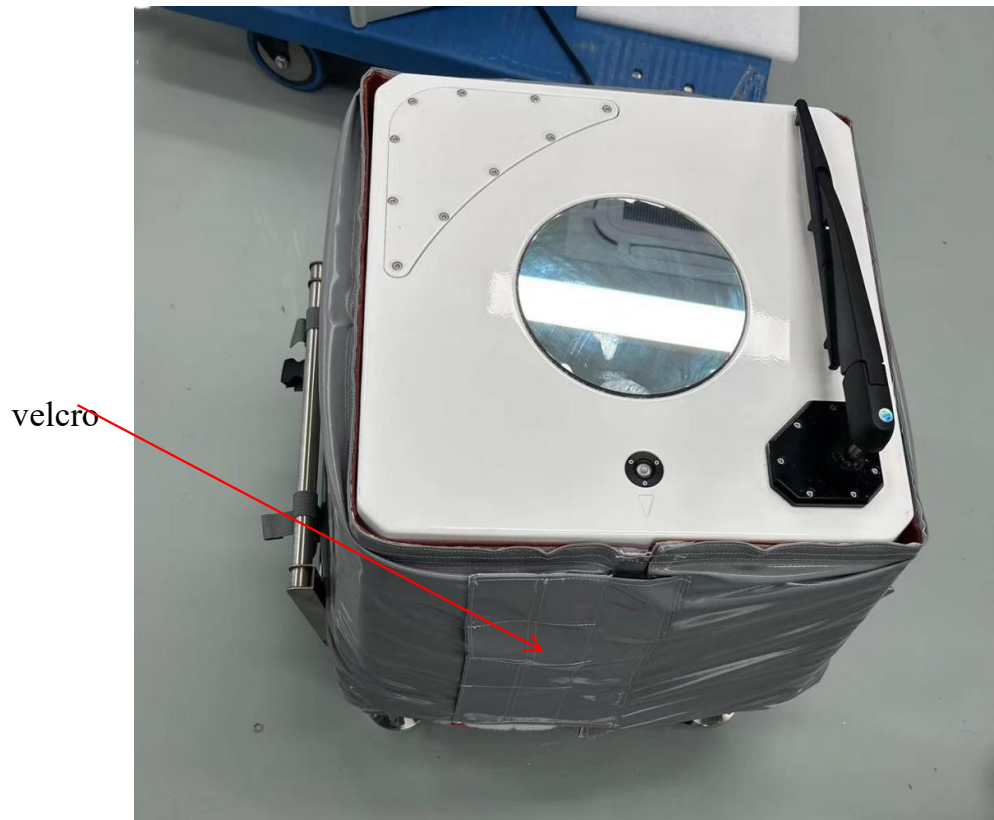

(3) Place the snow-proof top cover with the logo side facing north.

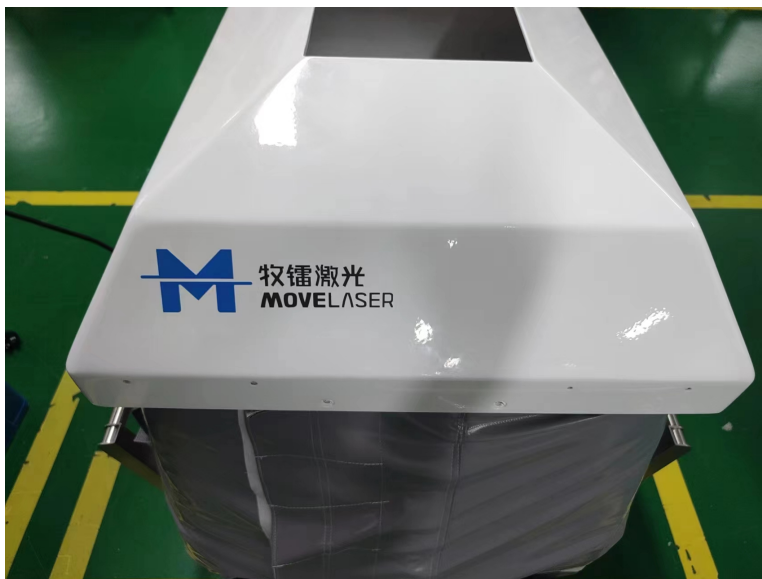

(4) Install the clips in the same sequence as below.

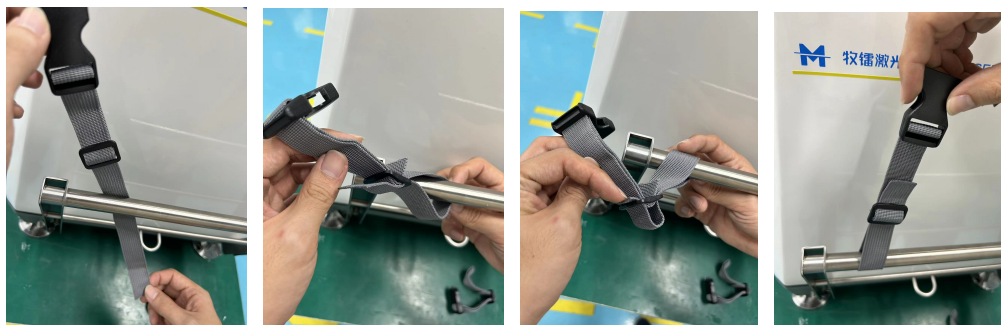

①

②

③


④

(5) Ensure that each rubber gasket is tightly fitted to the top cover.





(6) Lock the four snaps of the top cover.

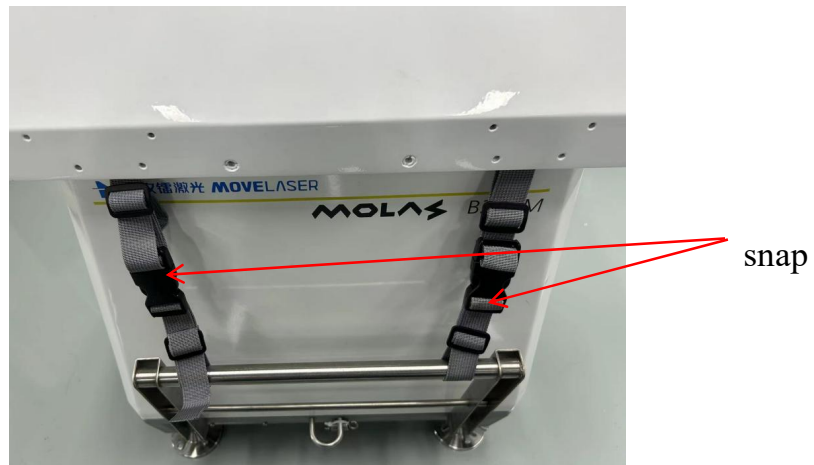

(7) Fix junction box for the Cold Protection Device.



(8) Power connection 110V



(9) Adjustment of gears



No Electricity



Heating power of the first gear:

200W



Heating power of the second gear:

120W



Heating power of the third gear:

80W

Note: The Cold Protection Device is only used in winter, please take it off the rest of the time to avoid rain washing.